

WIRING INSIDE EXE ENCLOSURE

WIRING INSIDE EXD ENCLOSURE

WIRING INSIDE EXE ENCLOSURE

10 WHITE
9 RED
8 RED

TO MOTOR N
TO MOTOR L
TO MOTOR EARTH

3
2
1

WHITE
RED
RED

TO 3 WIRE RTD OVER-TEMPERATURE SENSOR

N TO ELEMENTS
L TO ELEMENTS
TO INTERNAL EARTH

CLIENT EARTH CONNECTION
CLIENT NEUTRAL CONNECTION
CLIENT LIVE CONNECTION

NUMBERED CONNECTIONS RELATE TO LINE BUSHING WIRE NUMBERS

WIRING INSIDE EXD ENCLOSURE


INTERNAL EARTH

3

SWITCHED LIVE


NEUTRAL

LIVE

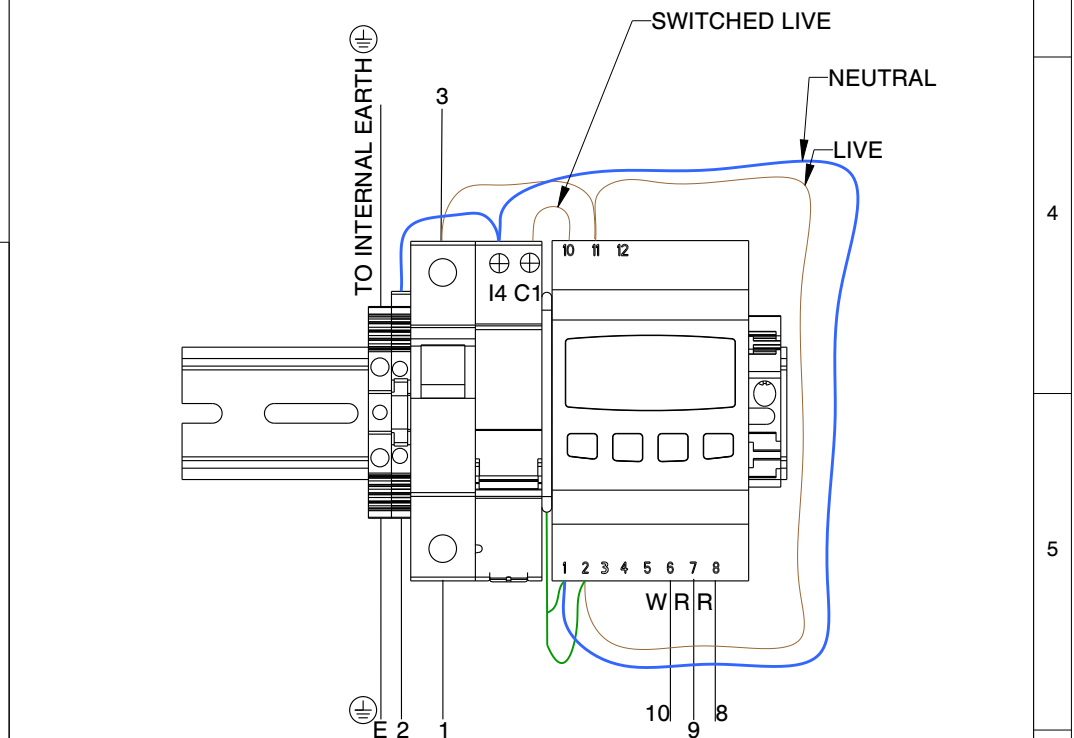

REV


5

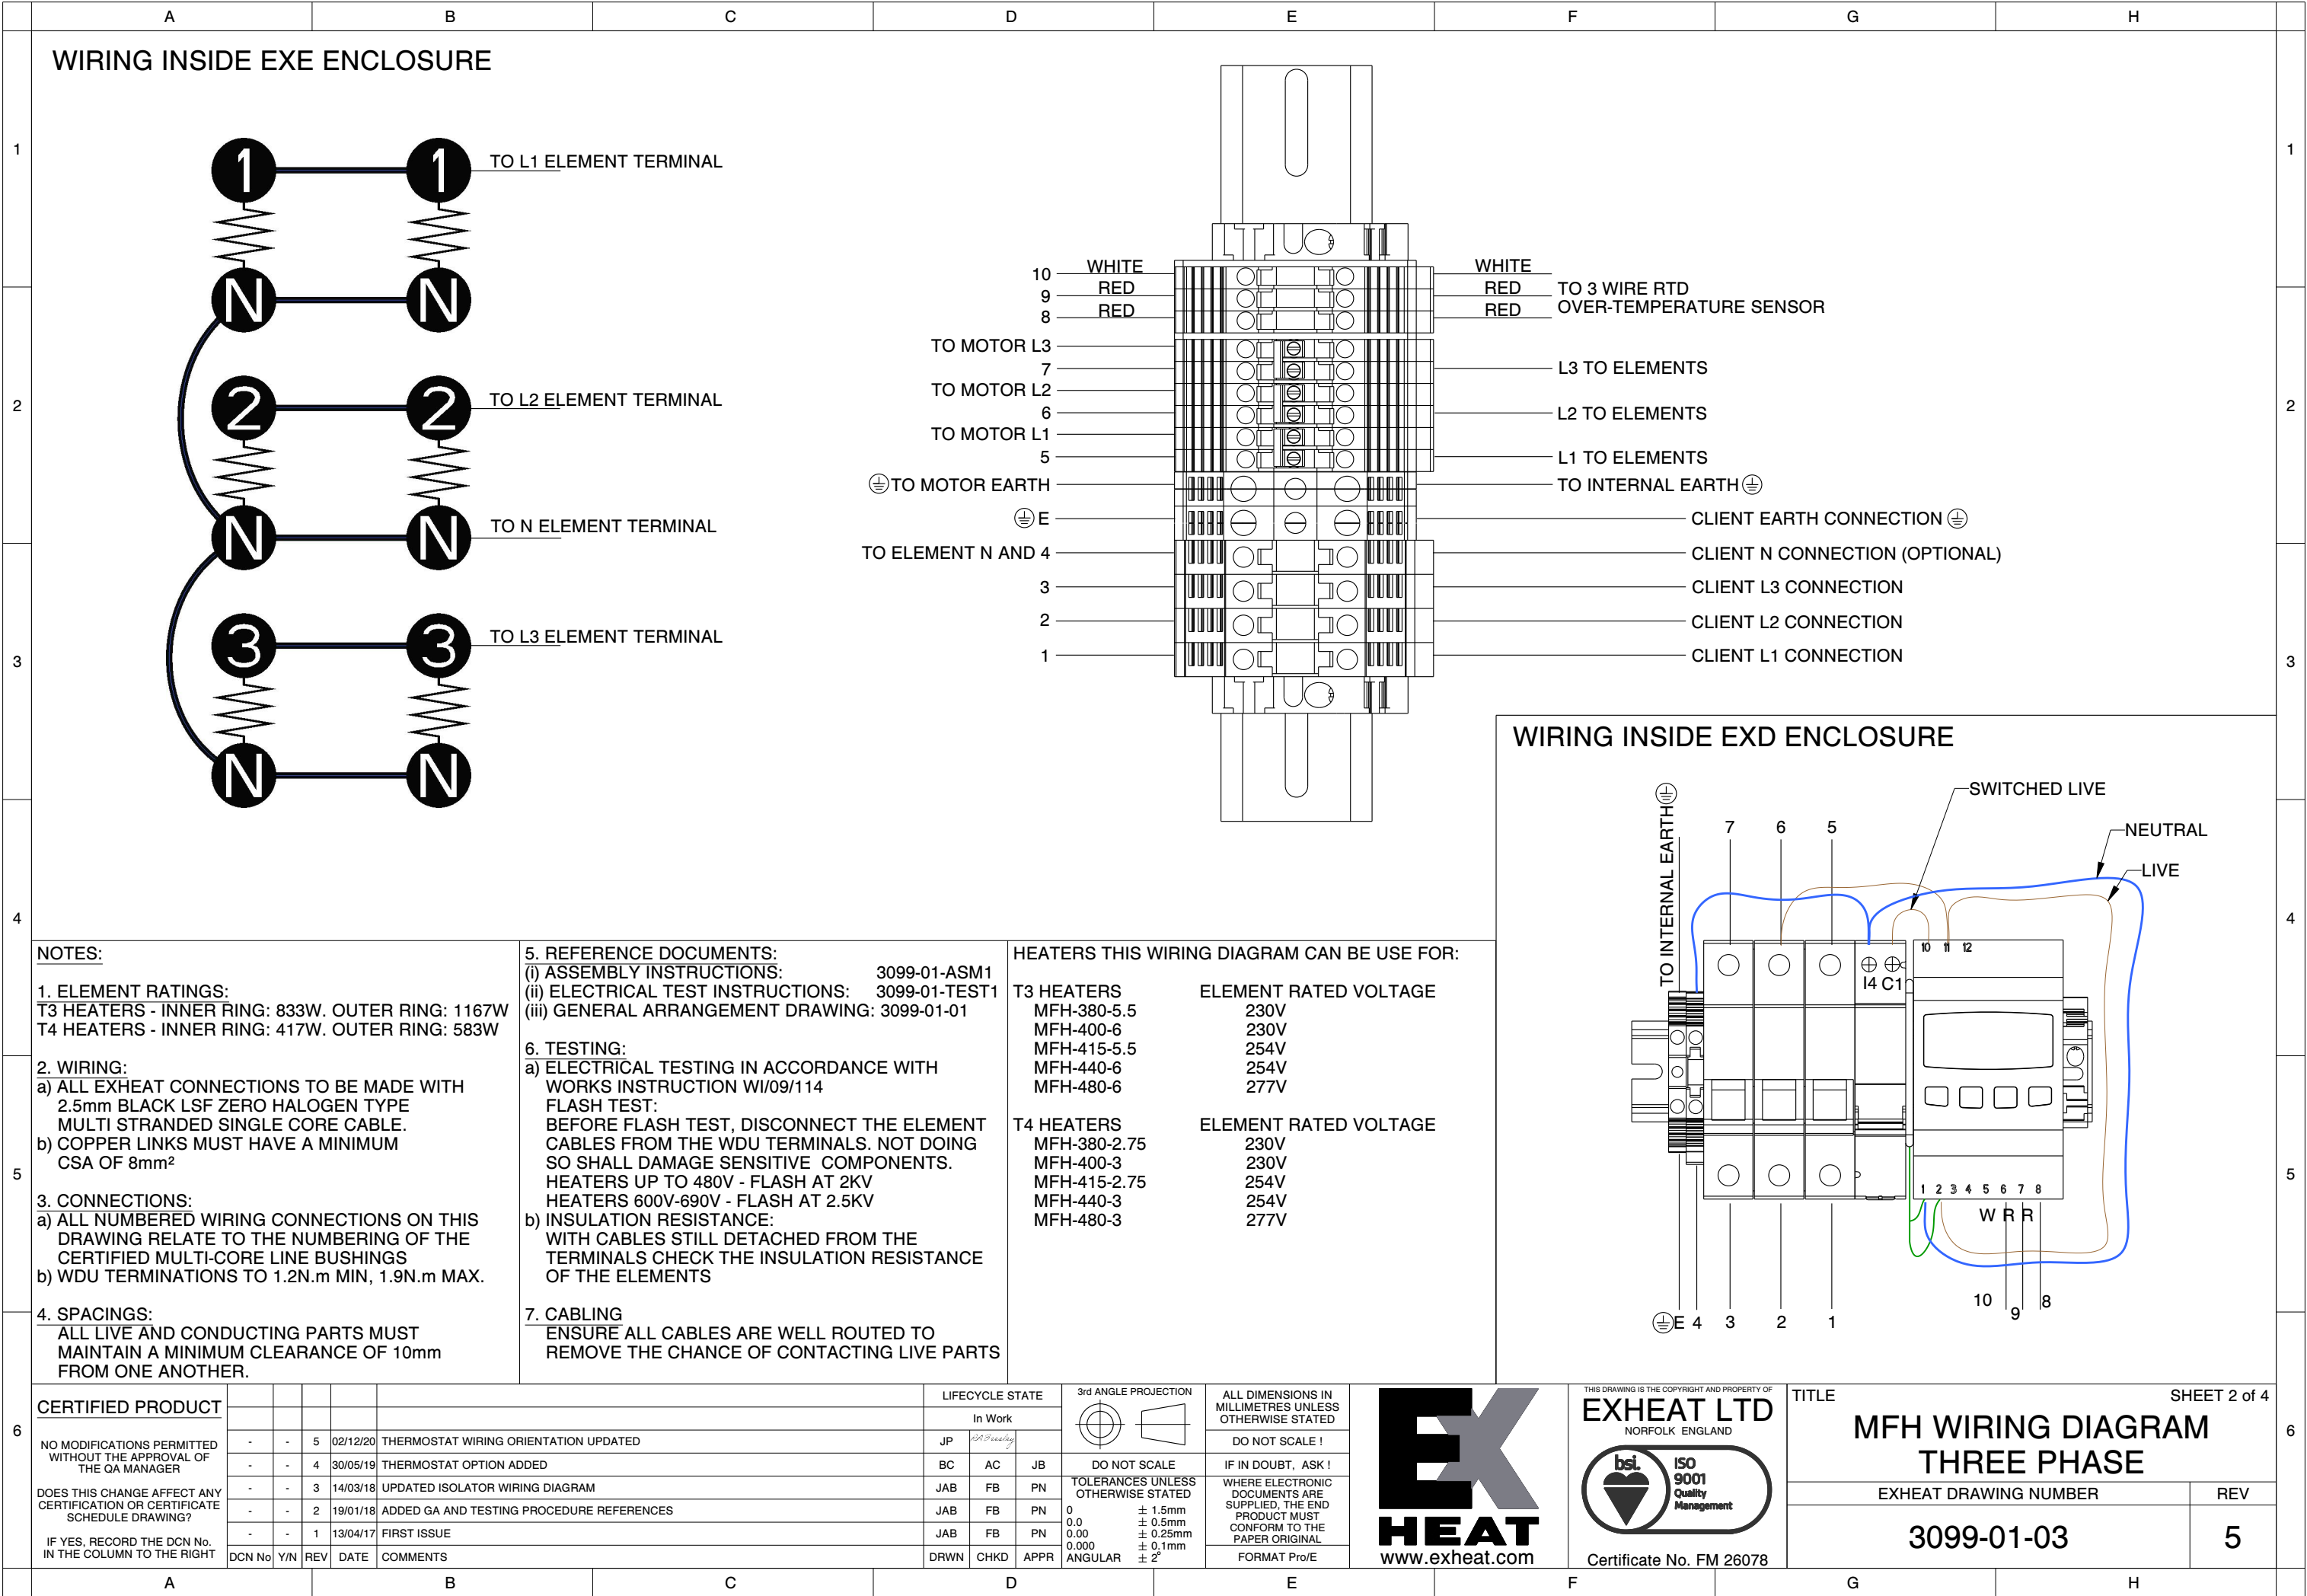


A	B	C	D	E	F	G	H
---	---	---	---	---	---	---	---

6

 IF THERMOSTAT REQUIRED



IF THERMOSTAT REQUIRED

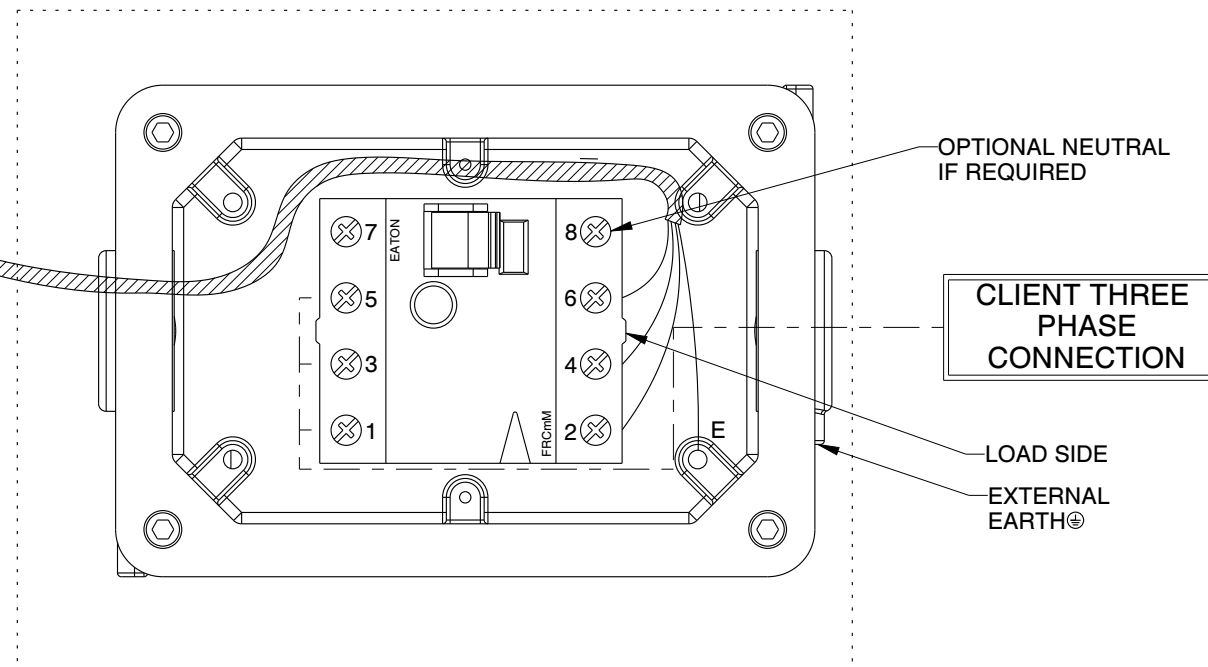

A	B	C	D	E	F	G	H
---	---	---	---	---	---	---	---