


Display module for modular entry panel

FB00427-EN

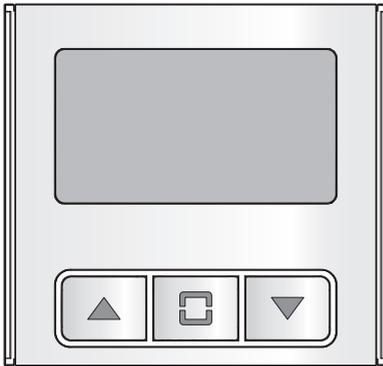


## General warnings

- Important personal safety instructions: READ CAREFULLY!
- Installation, programming, commissioning and maintenance must only be performed by qualified and experienced personnel in compliance with applicable regulations.
- Wear antistatic shoes and clothing if working on the control board.
- Do not obstruct ventilation or heat dissipation openings or vents.
- Keep hold of these warnings.
- Always disconnect the electrical power supply during cleaning or maintenance.
- This product should only be used for the purpose for which it was explicitly designed. Any other use is considered dangerous.
- The manufacturer declines all liability for any damage as a result of improper, incorrect or unreasonable use.

## DESCRIPTION

Display module connected and powered via BUS.


⚠ Module assembly or removal must take place while the entry panel is not powered.

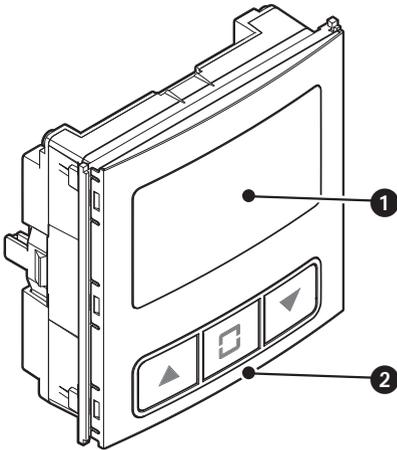


- 1 Display
- 2 Navigation buttons
- 3 Outlets for connection to other modules

### Technical data

Type	MTMDY
Power supply (V DC)	10.7 to 18
MAX current draw (mA)	250
MIN current draw (mA)	55
Storage temperature (°C)	-25 to +70
Operating temperature (°C)	-25 to +55
Protection rating (IP)	54

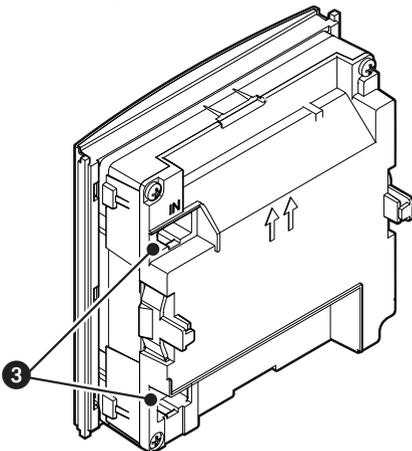

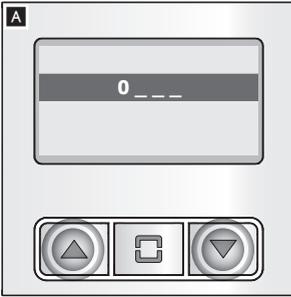


## Accessing configuration mode

Press and hold the ▲▼ buttons at the same time until the password entry screen shown in figure **A** appears (default password 1234).

Use the ▲▼ buttons to enter the first of the four numbers that make up your password. Press to confirm and move on to the next number.

Once you have entered the correct password, you can access the dedicated module configuration section **B**.



Use the ▲▼ buttons to scroll through the various parameters to configure. Press to access the configuration options.

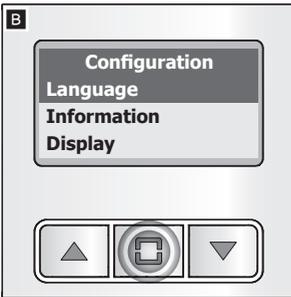

### [Language] **C**

Scroll through the list of available languages **C** using the ▲▼ buttons. Press to choose the one you require and go back to the previous menu.

Select ← and press to go back to the previous menu without changing the existing programming.

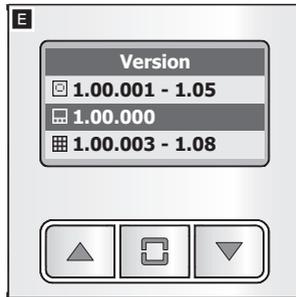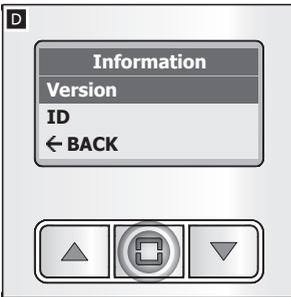

### [Information] **D**

The menu provides technical information regarding the display module and the other modules installed on the entry panel.

### [Version] **E**

The ▲▼ buttons allow you to scroll through the list and view the firmware version of the modules installed on the entry panel.

Key to symbols

audio or audio/video	pushbutton panel
display	keypad
RFID	info

Select ← and press to go back to the previous menu.


### [ID] **F**



The information contained in this menu refers to the audio or audio/video module installed on the entry panel.

SN: identification code (also found on the back of the module),

IP: IP address of the module and subnet mask (information only found on IP modules).

Select ← and press to go back to the previous menu.

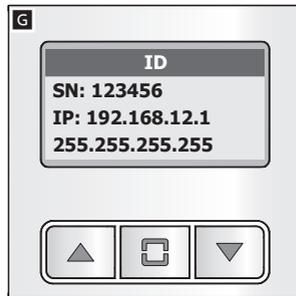


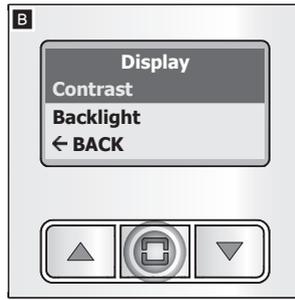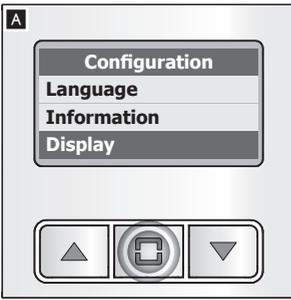

From the main menu **A**, use ▲▼, to select [Display] and press to access the configuration options.


### [Display] **B**

The menu allows you to adjust all the parameters relating to display lighting.

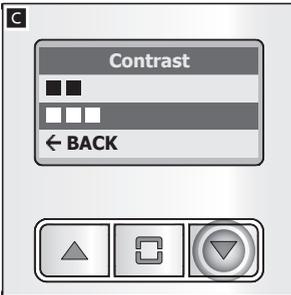

### [Contrast] **C**

The ▲▼ buttons allow you to scroll and simultaneously view the available contrast levels. Press to choose the required level and go back to the previous menu. Select ← and press to go back to the previous menu without changing the existing programming.

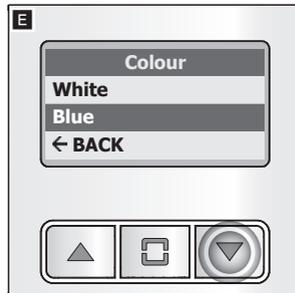

### [Backlight] **D**


#### [Colour] **E**

The ▲▼ buttons allow you to choose the colour of the display backlight. Press to confirm your choice and go back to the previous menu. Select ← and press to go back to the previous menu without changing the existing programming.



### [Brightness] **F**

The ▲▼ buttons allow you to scroll and simultaneously view the available brightness levels. Press to choose the required level and go back to the previous menu. Select ← and press to go back to the previous menu without changing the existing programming.

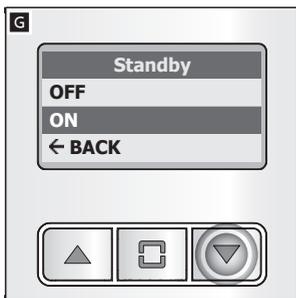

### [Standby] G

The ▲▼ buttons allow you to determine the behaviour of the display module after 30 seconds of inactivity.

OFF = The backlight is always on.

ON = The screen dims the display until a button is pressed.


If you choose to activate the [Standby] function (ON), pressing allows you to access the window for adjusting brightness in Standby mode **H**.



The ▲▼ buttons allow you to scroll and simultaneously view the available brightness levels for Standby mode.

Press to confirm your choice and go back to the previous menu.

Select ← and press to go back to the previous menu without changing the existing programming.

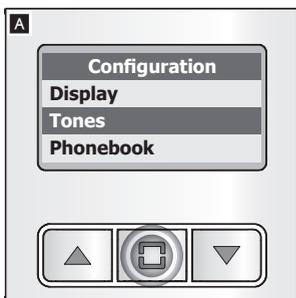



From the main menu **A**, use ▲▼, to select [Tones] and press to access the configuration options.

### [Tones] B

The ▲▼ buttons are used to activate/deactivate tones.

Press to confirm your choice and go back to the previous menu.

Select ← and press to go back to the previous menu without changing the existing programming.

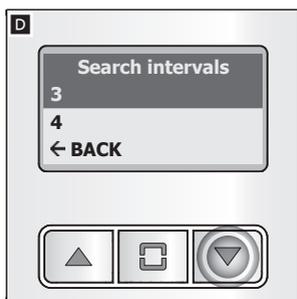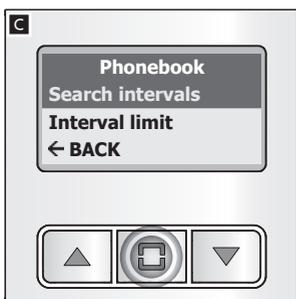

### [Phonebook] C

The menu allows you to configure the way in which the names in the phonebook are displayed in order to facilitate the user in searching for the required name.


### [Search intervals] D

The ▲▼ buttons allow you to choose into how many parts to divide the phonebook.

Press to confirm your choice and go back to the previous menu.

Select ← and press to go back to the previous menu without changing the existing programming.

*N.B. If you choose option [1], the phonebook name list will not be divided up in any way.*

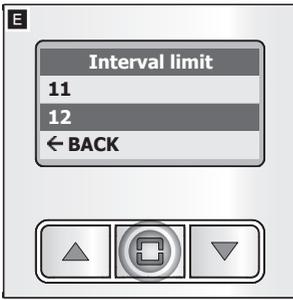

### [Interval limit] E

The ▲▼ buttons allow you to choose the maximum number of permissible names for each search range. Below this limit, the phonebook is not divided up any further.

Press to confirm your choice and go back to the previous menu.

Select ← and press to go back to the previous menu without changing the existing programming.



From the main menu **A**, use ▲▼, to select [Password] and press to change the password.

### [Password] B

At any point in the process you can select ← and press to return to the previous menu without changing the existing password.


Press to change the current password and continue.

Use the ▲▼ buttons to enter the first of the



four numbers that make up the old password. Press to confirm and move on to the next number.

Once you have entered all the numbers in the old password **C**, enter the new password as required **D E**.

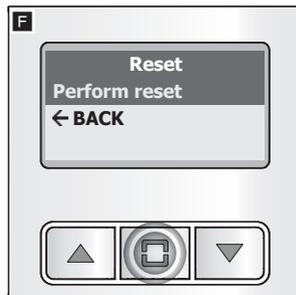

From the main menu **A**, use ▲▼, to select [Reset] and press .

### [Reset] F

Select ← and press to go back to the previous menu without resetting.

Press to reset and return the entry panel to its factory settings.

The product complies with the applicable reference directives.

**Dismantling and disposal.** Dispose of the packaging and the device properly at the end of its life cycle, according to the regulations in force in the country where the product is used. The recyclable components bear the symbol and code for the material.

THE DATA AND INFORMATION PROVIDED IN THIS MANUAL ARE SUBJECT TO CHANGE AT ANY TIME WITHOUT PRIOR NOTICE.  
MEASUREMENTS, UNLESS OTHERWISE INDICATED, ARE IN MILLIMETRES.

English - Manual FB00427-EN - ver. 1 - 10/2016 - © Came S.p.A.  
The contents of this manual are subject to change at any time without prior notice.

**CAME**  
safety & comfort



parkare



**Came S.p.A.**

Via Martiri Della Libertà, 15  
31030 **Dosson di Casier**  
**Treviso - Italy**

☎ (+39) 0422 4940

✉ (+39) 0422 4941

Via Cornia, 1/b - 1/c  
33079 **Sesto al Reghena**  
**Pordenone - Italy**

☎ (+39) 0434 698111

✉ (+39) 0434 698434

**www.came.com**