


This device complies with the Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

AUDIO ENTRY SYSTEM RECEIVER

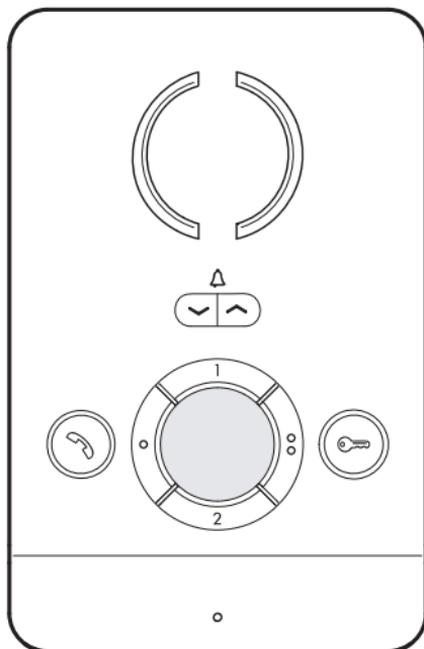

USER MANUAL

PEC

bpt

FB00121-EN

CE

FC

EN

English

Function of buttons



Adjustment of ringtone volume (high-medium-Off).

Red LED on = ringtone off.



Activation/Deactivation of communication.

Blue LED on = active communication.



Door lock release (blue LED).

In systems designed to accommodate this signal, during a call from an entry panel, the permanently lit LED indicates that the door is open.

1 Intercom 1 (blue LED)

2 Intercom 2 (blue LED)

Auxiliary 1 (blue LED).

- The function may also be available when there is no active communication, where the system permits it

Auxiliary 2 / Concierge call (blue LED).



- The function may also be available when there is no active communication, where the system permits it.

Only use soft, dry or slightly damp cloths to clean the terminal; do not use any chemical products.


Decommissioning and disposal. Do not dispose of the packaging material and the device at the end of its life cycle in the environment, but dispose of them in compliance with the laws in effect in the country in which the product is being used. The recyclable components are marked with a symbol and the material's ID marker.

THESE INSTRUCTIONS MUST BE ATTACHED TO THE DEVICE, THE DATA AND INFORMATION CONTAINED ARE TO BE CONSIDERED AS SUBJECT TO CHANGE AT ANY TIME AND WITHOUT THE NEED FOR ANY ADVANCE WARNING.



Standard functions

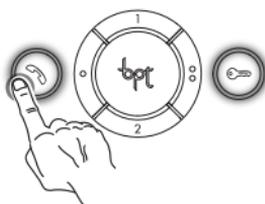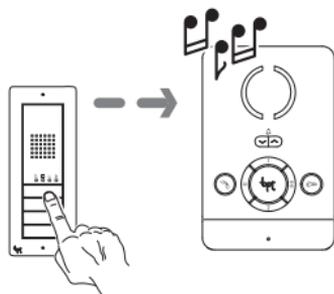



Answering a call.

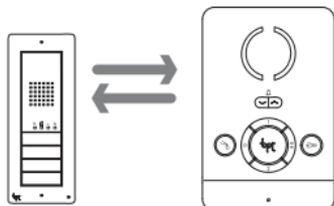

Active communication.

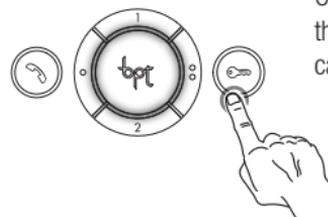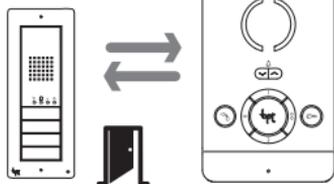


Opening the door of the entry panel that is calling.

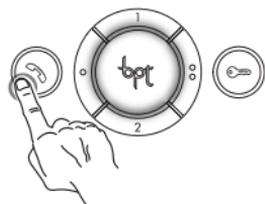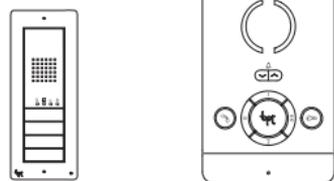

Ending the communication

Intercom

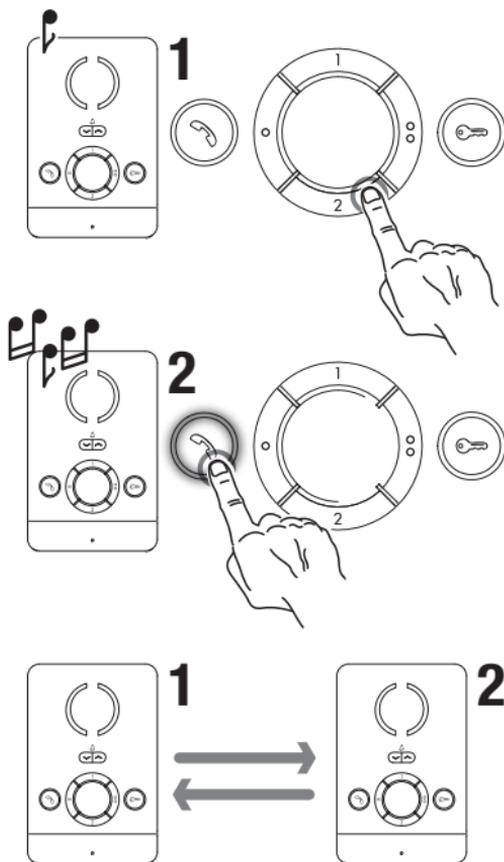

Select the extension that you want to call; the line free tone indicates that the call has been forwarded.

3 successive beeps indicate that it is not possible to make calls because the line is busy.


The receiver being called rings.

Press the  key on the receiver that is called to activate the communication.

Internal receivers 1 and 2 are in communication.

During a conversation between extensions, a call from an entry panel is signalled to the receivers by a beep that is repeated every 5 seconds.

Call transfer

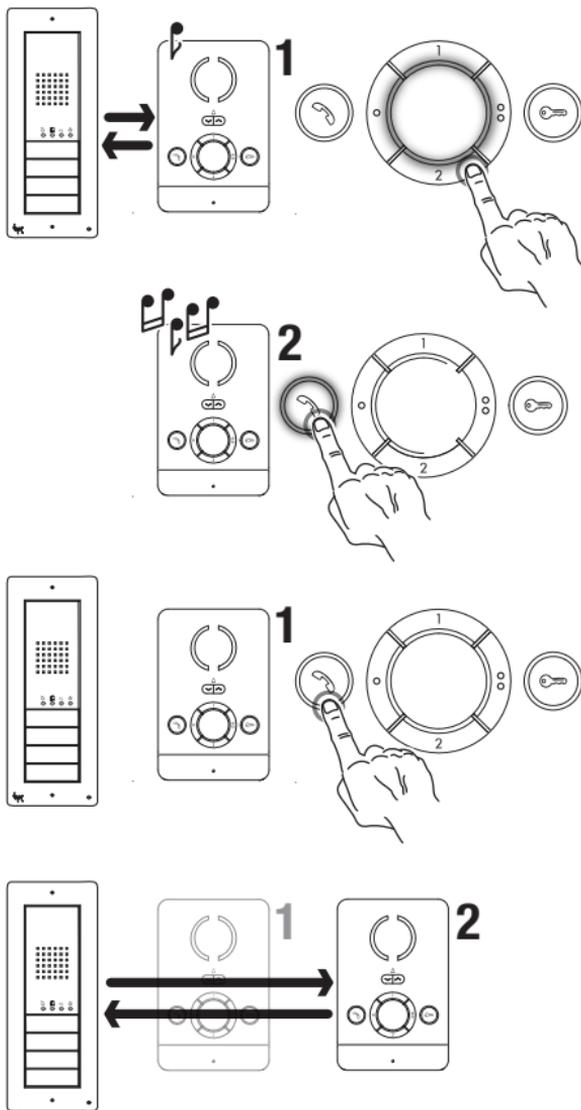

With an active communication, select the extension you wish to transfer the call to; the line free tone indicates that the call has been forwarded.

The receiver being called rings.


Press the  key on the receiver that is called to activate the communication. Internal receivers 1 and 2 are in communication, the entry panel is waiting.

Press the  key on receiver 1 to end the communication with the entry panel and transfer the call to receiver 2.

The receiver that receives the call can also transfer it.

Call from concierge notification

☞ Function available only on systems with concierge's desk.


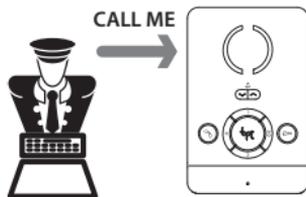


An unanswered call from the concierge's desk is marked by the Aux2 LED ☉ lighting up.

The notification goes out when communication with the concierge begins.







Request for call to concierge

☞ Function available only on systems with concierge's desk.

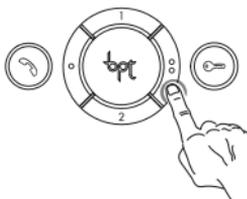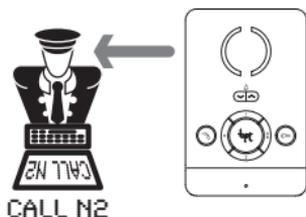

Pressing the Aux2 ☉ button sends a request for call back to the concierge.

Programming ringtones

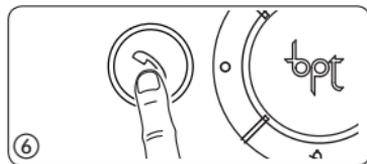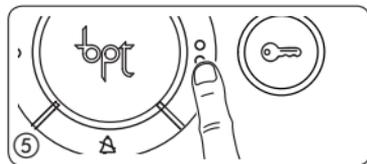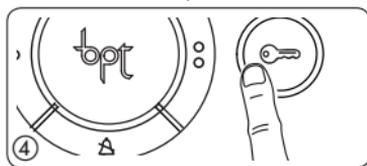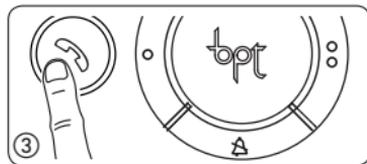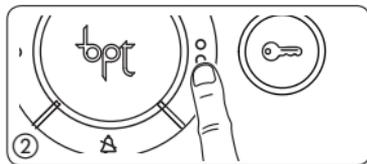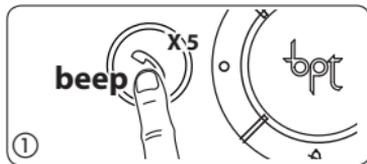

Entering Programming Mode

Press the  button 5 times in 5 seconds; a short beep confirms the programming has been input **1**.

Programming the ringtone associated to a call from the entry panel (1 beep).

Press the  key to listen to the available ringtones in turn **2**.

To select the ringtone and exit programming press the  key **3**.

To select the ringtone and continue programming press the  key **4**.

Programming the ringtone associated to a call from the front door (2 beeps).

Repeat the process described in points **2 3 4**.

Programming the number of times the selected ringtone is repeated, for the call from the entry panel (3 beeps).

Press the  key as many times as are desired (from 1 to 6) **5**.

3 seconds after the last press, the ringtone is reproduced for the number of repetitions chosen.

To save the ringtone and exit programming press the  key **6**.

CAME
safety & comfort



Came S.p.A.

Via Martiri Della Libertà, 15
31030 **Dossone di Casier**
Treviso - Italy

☎ (+39) 0422 4940

📠 (+39) 0422 4941

Via Comia, 1/b - 1/c
33079 **Sesto al Reghena**
Pordenone - Italy

☎ (+39) 0434 698111

📠 (+39) 0434 698434

www.came.com