

/13.8.2019/Revize:04

220-240V, 50/60Hz

Technical conditions for mounting series PITBUL-N-LED. PITBUL-N-Em-LED and MULTIPITBUL-N-LED

In case of any erving on lights fitting in premises with danger of explosion, the national safety rules and regulation for prevention of accidents are to be

PITBUL-N-LED – are dustproof and waterproof lighting fixtures designed for the lightening premises with danger of explosive

PITBUL-N-Em-LED - non-maintained emergency lifting

MULTIPITBUL-N-LED - maintained emergency lifting

- Mounting of light fittings:

 9. Take the fixture from transporting packing.
 - Unbolt the screws on glass cover and remove it.
 - Unbolt the screws of reflector and take it from the housing.
 - Fix empty housing on the base bay means of one of allowed fastening possibilities.
 - Pass the supply cable through the cable gland. Fix the cable gland properly when the sealing rubber washer is partially damaged. The outer diameter of the supply cable must be in the range (table List of cable glands), which is necessary condition for the right function of the cable gland. The hole for the supply cable in the sealing plug of the light fitting, in which the cable gland is not used, has to be properly packed with plug.
 - Plug in the supply cable into the free part of the feeding terminal block as follows:

PITBUL-N-LED		PITBUL-N-Em-LED		MULTIPITBUL-N-LED		
on terminal L1 on terminal N on terminal ⊕	 phase conductor neutral conductor protective conductor 	on terminal L1 on terminal N on terminal ⊕	cond. of charging phase neutral conductor protective conductor	on terminal L1 on terminal L2 on terminal N on terminal ⊕	 cond. of charging phase cond. of switching phase neutral conductor protective conductor 	
To each pole of terminal block can be connected two conductors with cut 0.5 – 2.5mm ² .						

- Attend to correct stripping (8 9 mm) and connection on terminals.
- Insert the reflector back to the body and lock with screws.
- 16. Close the glass and fasten it properly. (tighten the screws to maximum)

For correct operation it is necessary to observe enclosed instruction about testing of emergency fixtures. Switch the luminaire off the mains voltage. LED module, emergency lamp (green marker) must light control LED diode goes out. Should the emergency lamp be extinguished within the test period though the battery is fully charged, the latter will have to be replaced by a new battery set.

Warning: The full battery capacity will be available after approximately three charging/discharging cycles.

Warning for the mounting of light fittings PITBUL-N-LED, PITBUL-N-Em-LED and MULTIPITBUL-N-LED:

The fitting can be installed only by authorized person.

Producer included in recycling system provided by EKO-KOM company (EK-F06022453).

The light source in this lighting fixture can be replaced only producer or its contractual service technique or a similarly qualified person WARNING - potential danger of electrostatic charging.

WARNING - the lighting fixture must be installed in the position, which does not allow the touch of persons and parts of the fixture. When installing lighting fixture, observe the ESD safety using appropriate tools!


When the mounting instructions are not observed, the producer can't be responsible for incidental damages incurred.

The light fitting can be fastened with several possible methods:


- through the background by means of screws M8
- by means of pole brackets
- by means of recessed frame
- by means of ceiling mount
- by hanging eye

WARNING - the fixture should be cleaned with damp duster only. It is necessary to keep periodic cleaning intervals of lighting fixture.

Cable glands	Diameter of the cable for cable glands M20x1,5	Diameter of the cable for cable glands M25x1,5	
OBO V-TEC Ex	Ø7-12mm	Ø12-18mm	
CEAG CHG 960 92 P	Ø5,5-13mm	-	
WISKA ESKE/1 (S)(-L)(-*)(-RDE)	Ø7-13mm	Ø10-17mm	
ELFIT UNI	Ø7-12mm	-	
BIMED LYRA (EURO-TOP)	Ø7-12mm	Ø12-17mm	

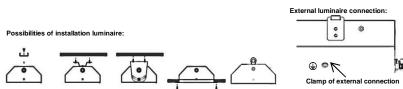

For wall mounting, the hinge side must always be at the bottom, for the possible suspension of the glass:

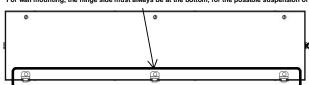

Technical conditions for mounting series PITBUL-N-LED, PITBUL-N-Em-LED and MULTIPITBUL-N-LED

Application of light fittings:

The explosion proof light fittings meet the standards according to the EU instructions 2014/34/EU.

They can be used in areas with danger of explosion according to the following chart.							
Area with danger of explosion	Marking of exterior ambient	Clasification of area					
	ambient	Marking	Compulsory regulation				
Danger of explosion of inflammable	BE3N1	ZONE 21	ČSN EN 60079-14 ČSN EN 60079-10-2				
Danger of explosion of inflammable gas and vapors	BE3N2	ZONE 2	ČSN EN 60079-14 ČSN EN 60079-10-1				

Technical data:		
Admissible range of operating temperature PITBUL	-N-LED-5000-218	Ta -20°C to +65°C
Admissible range of operating temperature PITBUL	-N-LED-10000/15000-236/258	Ta -20°C to +55°C
Admissible range of operating temperature PITBUL	N-LED-10000-418	Ta -20°C to +55°C
Admissible range of operating temperature PITBUL	-N-LED-18300-436	Ta -20°C to +50°C
Admissible range of operating temperature PITBUL	-N-LED-29000-458	Ta -20°C to +45°C
Admissible range of operating temperature MULTIF	PITBUL-N-LED-5000/10000/15000-218/236/258	Ta 0°C to +40°C
Admissible range of operating temperature MULTIF	PITBUL-N-LED-10000/18300/29000-418/436/458	Ta 0°C to +35°C
Admissible range of operating temperature PITBUL	-N-Em-LED-500-218-236-258	Ta 0°C to +50°C
Protection level: IP65		
Insulation class: I		
Rated voltage and frequency:	for ballasts HELVAR:	220-240V, 0/50/60 Hz
, ,	for ballasts TRIDONIC:	220-240V, 0/50/60 Hz
	for ballasts HADLER:	220-240V, 0/50/60 Hz
	for ballasts TCI:	110-240V; 50/60 Hz
	for ballasts TCI:	220-240V: 0 Hz
	for emergency systems AWEX:	220-240V, 50/60Hz

Operation and maintenance instructions:

The light fittings, which operate in areas of above mentioned premises, are under the requirements resulting from compulsory regulations of valid EN:

for emergency systems TRIDONIC:

- The light fitting must not be open, if the terminal block is alive.
- Any change or replacements of components of the light fittings, which can influence the protection before the danger of explosion, are forbidden.
- The repair of the light fittings can be done only by person with relevant qualification, only with original spare parts and in compliance with the latest
- The operation with cracked cover is forbidden, replace the damaged cover immediately!!!
- In the fixtures series PITBUL-N-LED, PITBUL-N-Em-LED and MULTIPITBUL-N-LED can be used through wiring connection.
- Maximum allowed number of connected fixtures is referred in table. Recommended protection is type B, 10A.

The fixtures are certified by FTZÚ - AO 210, Ostrava - Radvanice:

1) Certificate type FTZÚ 17 ATEX 0129X from date 15. 02. 2018

Marking lights:

(II 3G Ex nR IIC T6 Gc

(S) II 3D Ex to IIIC T68°C Do

Maximum admissible number of PITBUL-N-LED, MULTIPITBUL-N-LED light fittings with one-phase and three-phase through wiring connection:

one-phase			three-phase				
PITBUL-N-LED MULTIPITBUL-N-LED		PITBUL-N-LED MULTIPITBUL-N-LED		PITBUL-N-LED MULTIPITBUL-N-LED		PITBUL-N-LED MULTIPITBUL-N-LED	
236	10	436	7	236	9	436	6
258	7	458	4	258	6	458	4

Dimensions of mounting holes for recessed frames

Type of luminaire	Hole dimension	Type of luminaire	Hole dimension	Type of luminaire	Hole dimension
258	1653x323mm	236	1353x323mm	218	742x323mm
458	1653x383mm	436	1353x383mm	418	742x383mm

Battery change is necessary when the fixture doesn't observe the conditions of rated operation period durability. In explosive area it is prohibited to disconnect battery for emergency unit. It is allowed to disconnect the fixture from supply voltage and take remove reflector from the fixture

- Disconnect the fixture from supply voltage.
- Unbolt the screws on glass cover and remove it Unbolt the screws of reflector and take it from the housing.
- Disconnect battery from emergency unit in non-explosive area as follows "-"black conductor and "+"red conductor.
- Remove the old battery
- Screw the new battery (mark the date of operation start).
- Connect conductors to battery as follows "+"red conductor and "-"black conductor.
- Insert the reflector back to the body and lock with screws.
- Close the glass and fasten it properly. Connect the fixture to the supply voltage.

WARNING: The battery in the fixture can be changed for the same type or the same parameters only!